
 PCC Pavement Removal

Notes:

1. Joint A (fixed joint) shall be the new joint with the shortest distance to the next transverse joint or working random crack. Make the saw cut at a 1 to 4 skew or a 1 to 12 skew. Place deformed bars perpendicular to the face of the saw cut.
2. Joint B (free joint) shall be the new joint with the greatest distance to the next transverse joint or working random crack. Place the smooth bars within the tolerances shown on the "Dowel Bar Placement - Full Depth Repair" detail sheet.
3. Place free joint (Joint B) on the approach side of the repair when the distance to the next transverse joint or working random crack is equal for both new joints.

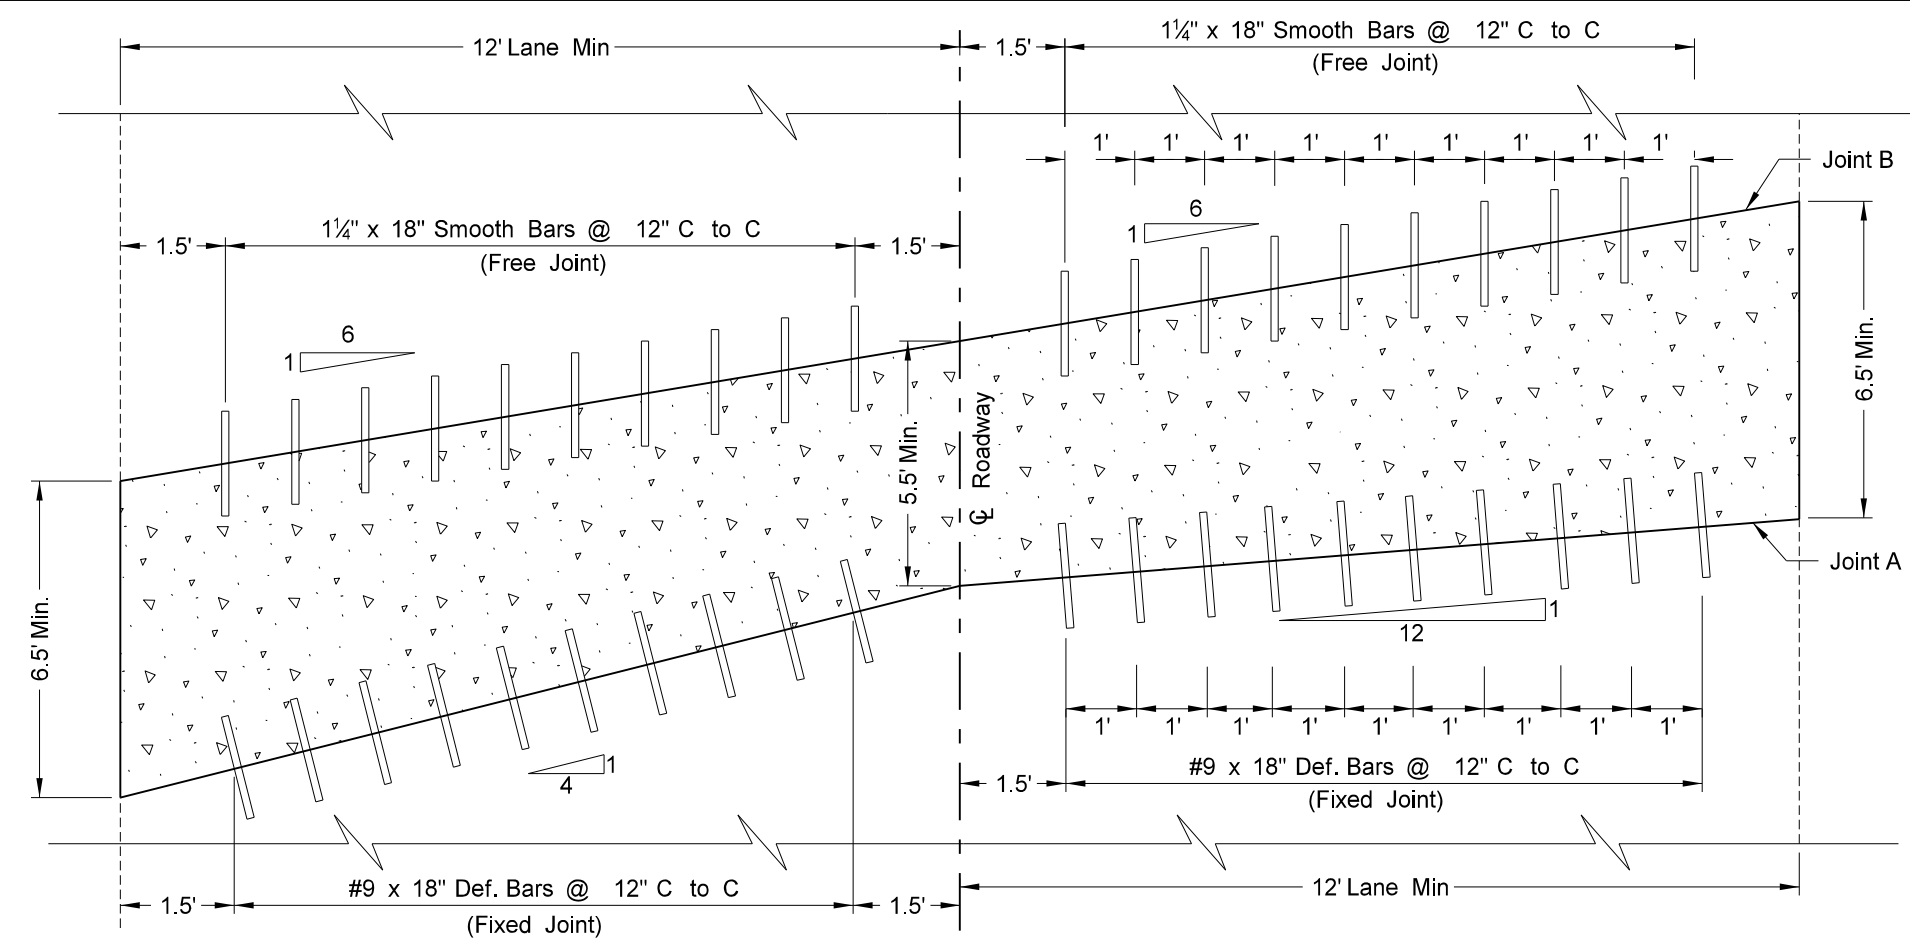

 PCC Pavement Placement

Concrete Pavement Repair For Skewed Joints
Full Depth, Non-Reinforced PCC Pavement
(Longitudinal Length Less Than One Panel)

Project Description
Project Location

This document
is preliminary
and not for
construction or
implementation
purposes.