

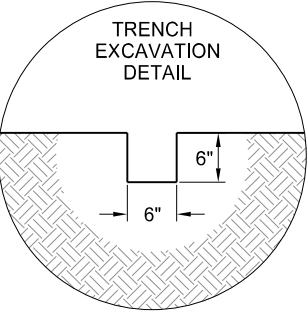
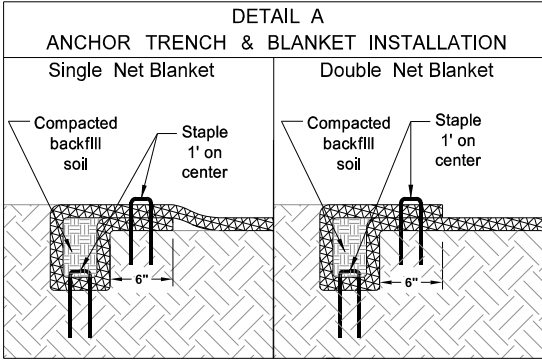
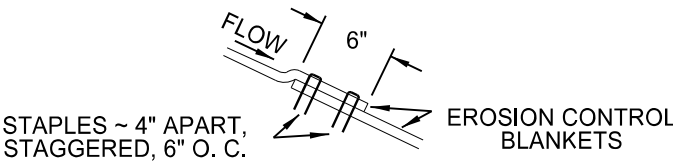


INSTALLATION STEPS:

1. Prepare smooth slope per spec. section 255
2. Amend soil and seed, as specified.
3. Dig anchor trench. Set aside native soil removed from trench.
4. Secure blanket in anchor trench, staking or stapling blanket as shown.
5. Replace native soil previously removed from trench.
6. Staple blanket as shown so there are no gaps between the blanket and the soil.
Staple while unrolling blanket to minimize walking on blanket.
7. Install splices a minimum 24 inches prior to toe of slope.

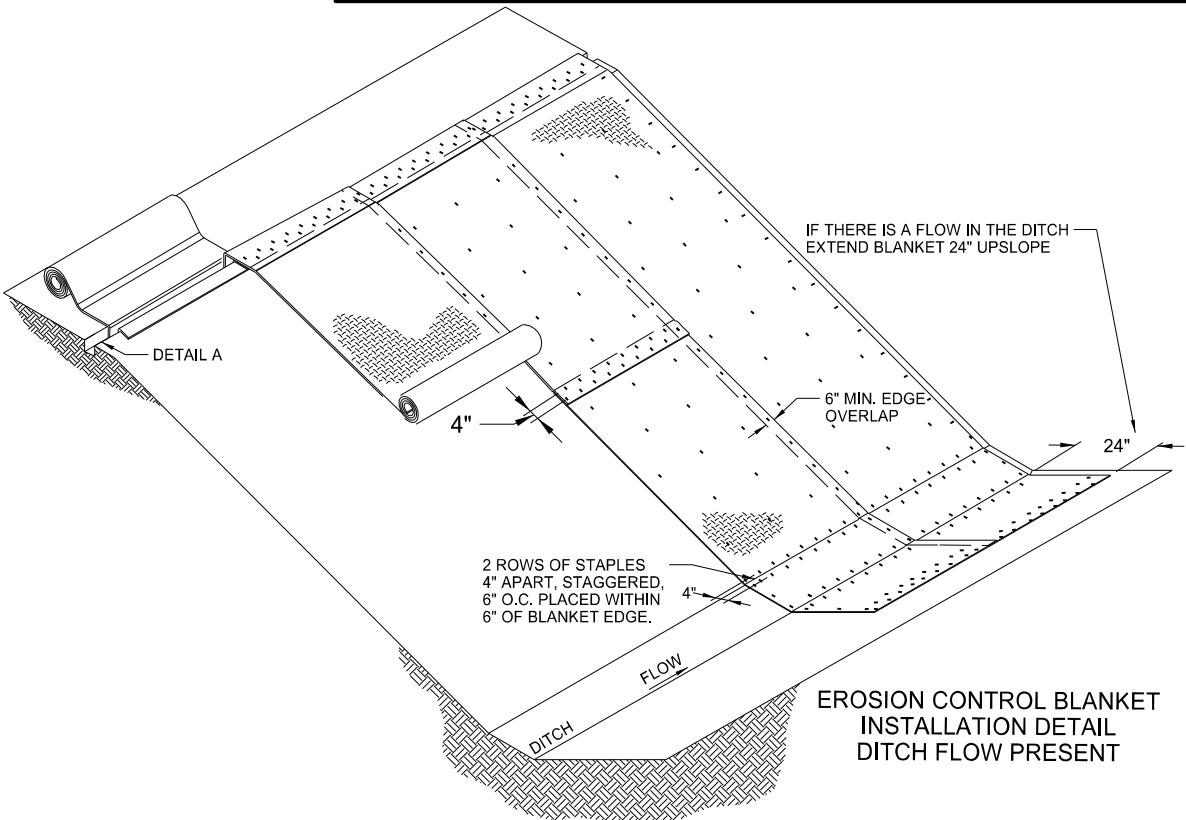

NOTE:
Install Single Net Blanket with netting on top of installed blanket.

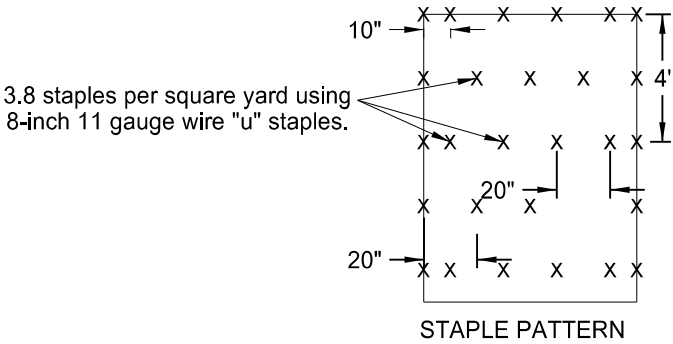

This document
is preliminary
and not for
construction or
implementation
purposes.

Slope Erosion Control Blanket Installation Details

Project Description

Project Location